

How to Set Vacuum on Vacuum Relief Valve

1. Replace old vac relief valve with new
 - a. (see poly T after Pre-Filter)
2. Remove blue cap
3. Turn on vacuum pump
4. Larger bolt, screw down until vac gauge reads 9-10 lbs
 - a. (NO more than 12)
5. Smaller bolt, screw down until it touches larger bolt
6. Add lock-tite
7. Install blue cap